Vacancy & Occupancy Sensors | G 1 4

VACANCY SENSORS

PRODUCT FEATURES

- ► Manual ON
- ▶ Automatic OFF after time delay expires and manual OFF option
- Adjustable time delay from 15 seconds to 30 minutes
- Adjustable sensitivity settings
- ▶ Passive Infrared Technology
- ▶ 2 year warranty
- Standard decorative wall plate included
- ▶ Compatible with MAGNETIC and ELECTRONIC BALLAST

NOTES

- ▶ Neutral Wire Required
- Vacancy Sensors should be initially left ON for 4-5 minutes for first time to function properly



OCCUPANCY SENSORS

PRODUCT FEATURES

- ▶ Turn lights ON/OFF automatically
- With manual ON/OFF pushbutton
- Adjustable time delay from 15 seconds to 30 minutes
- 5 year warranty
- Standard decorative wall plate included
- ▶ Compatible with MAGNETIC and **ELECTRONIC BALLAST**

OSD-S-W ONLY

- ▶ Choice of Manual-ON or Auto-ON operation
- Occupancy Mode: Turn lights ON/OFF automatically
- ▶ Vacancy Mode: Manual ON/OFF automatically

NOTE

Neutral wire required



OCCUPANCY SENSORS

PRODUCT FEATURES


- ▶ Turn lights ON/OFF automatically
- With manual ON/OFF pushbutton
- ▶ Built-in VAC selection side button switch
- Adjustable time delay from 15 seconds to 30 minutes
- ▶ Self Adaptive feature automatically adjusts time delay based on occupants behavior patterns
- ▶5 year warranty
- Standard decorative wall plate included
- ▶ Compatible with MAGNETIC and **ELECTRONIC BALLAST**

- ▶ No neutral wire required
- Ground wire connection required

*While Supplies Last





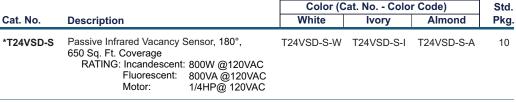




Cat.		Color (Cat. No Color Code)			Std.
No.	Description	White	lvory	Almond	Pkg.
OSD-S	Passive Infrared Occupancy Sensor, 180°, 650 Sq. Ft. Coverage RATING: Incandescent: 800W @120VAC Fluorescent: 800VA @120VAC Motor: 1/4HP@ 120VAC	OSD-S-W	*OSD-S-I	*OSD-S-A	10



Cat.		Color (Cat. No Color Code)			Std.
No.	Description	White	lvory	Almond	Pkg.
*OSD-S-2W	Passive Infrared Occupancy Sensor, 180°, 1200 Sq. Ft. Coverage	*OSD-S-2W-W	*OSD-S-2W-I	-	10

RATING: Incandescent: 800W @120VAC 800VA @120VAC Fluorescent:

1600VA @ 277VAC

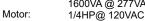



NOTE: Occupancy Sensors should be initially left ON for 4-5 minutes for first time to function properly.

