

Occupancy Sensors

OCCUPANCY SENSORS

- **California Title 24 Compliant**
- Turn lights ON/OFF automatically
- With manual ON/OFF pushbutton
- Built-in VAC selection side button switch
- Adjustable time delay from 15 seconds to 30 minutes
- "Walk-through" sensing mode increases energy savings by turning light OFF shortly after momentary occupancy
- Self adaptive feature automatically adjust time delay based on occupants behavior patterns
- 5 year warranty
- Standard decorative wall plate included
- Compatible with **MAGNETIC** and **ELECTRONIC BALLAST**
- **NO NEUTRAL** wire required
- **GROUND WIRE** connection required.
- Dual Relay(control two separate load)



Cat. No.	Description	Color (Cat. No. - Color Code)			Std. Pkg.
		White	Ivory	Almond	
OSD-S-D	Passive Infrared Occupancy Sensor, 180°, 1200 Sq. Ft. Coverage Dual Relay RATING: Incandescent: 800W @120VAC Fluorescent: 800VA @120VAC Motor: 1/4HP@ 120VAC	OSD-S-D-W	OSD-S-D-I	-	10



OSD-S-D

Cat. No.	Description	Color (Cat. No. - Color Code)			Std. Pkg.
		White	Ivory	Almond	
OS-P	Passive Infrared Occupancy Sensor, 150°, 450 Sq. Ft. Coverage RATING: Incandescent: 500W @120VAC Fluorescent: 500VA @120VAC Motor: 1/8HP@ 120VAC	OS-P-W	OS-P-I	-	10



OS-P

- **California Title 24 Compliant**
- Turn lights ON/OFF automatically
- With manual ON/OFF pushbutton
- Adjustable time delay from 15 seconds to 30 minutes
- Adjustable sensitivity settings
- 2 year warranty
- Standard decorative wall plate included
- **NO NEUTRAL** wire required
- For **MAGNETIC BALLAST** only



Cat. No.	Description	Color (Cat. No. - Color Code)			Std. Pkg.
		White	Ivory	Almond	
OS-S	Passive Infrared Occupancy Sensor, 150°, 450 Sq. Ft. Coverage RATING: Incandescent: 500W @120VAC Fluorescent: 500VA @120VAC Motor: 1/8HP@ 120VAC	OS-S-W	OS-S-I	-	10



OS-S

- Turn lights ON/OFF automatically
- With manual ON/OFF setting allows use as regular switch
- Adjustable time delay from 15 seconds to 30 minutes
- Adjustable sensitivity settings
- 2 year warranty
- Standard decorative wall plate included
- **NO NEUTRAL** wire required
- For **MAGNETIC BALLAST** only



NOTE: Vacancy and Occupancy Sensors should be initially left ON for 4-5 minutes for first time to function properly.