


INSTALLATION INSTRUCTIONS:

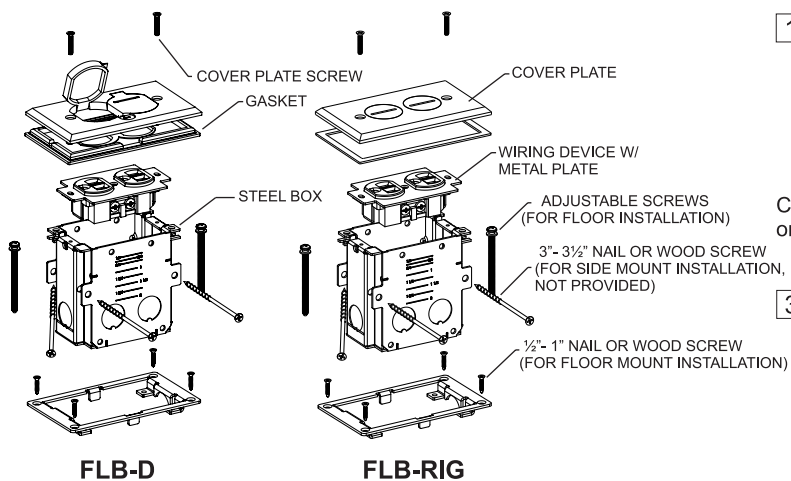

SUB-FLOOR INSTALLATION

1. Cut a hole of the sub-floor 2.5" X 4" or using a guided hole (included).
2. Insert the assembled adjustable floor box to the desired hole location for installation(sub-floor).
3. Fasten the adjustable floor box thru ring with 4 holes by wood screws (not provided).
4. SQUARE DRIVER RECOMMENDED WHEN ADJUSTING THE FLOOR BOX. Adjust the floor box according to your finish floor, steel box is adjustable from flush to 2" (box height is marked on the side of the box).
5. Insert wiring device and wire accordingly.
6. Install the cover with metal plate and gasket using screws provided.
7. Finish Installation. Recommended to put silicone sealant for tile floor.

SIDE MOUNT INSTALLATION

1. SQUARE DRIVER RECOMMENDED WHEN ADJUSTING THE FLOOR BOX. Remove the ring by using screw driver or power drill.
2. Cut a hole of the sub-floor 2.5" X 4" or using a guided hole (included).
3. Check your finish floor height before installing the floor box. Floor box height marked on sides.
4. OPTION 1: Use the back hole to install the floor box using 3/4" to 1" nail or screw (not provided).
5. OPTION 2: Use the front hole to install the floor box using 3-1/2" wood screws (not provided).
6. Insert wiring device and wire accordingly.
7. Install the cover with metal plate and gasket using screws provided.
8. Finish Installation. Recommended to put silicone sealant for tile floor.

NOTE:

Floor Box Adjustable should be installed in sub-floor and adjust according to the height of the finish floor (i.e. carpet, tile, hardwood, etc).