




See Multigang and Handy Box Device Covers on pg. A26 & A32

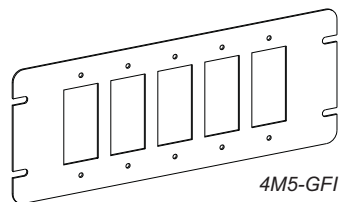


4M5-GFI

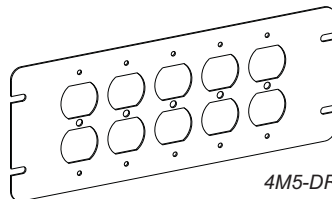


4M5-DR

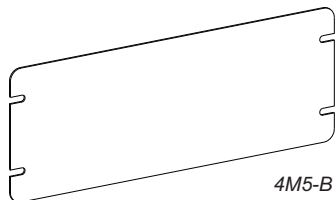


4M5-B

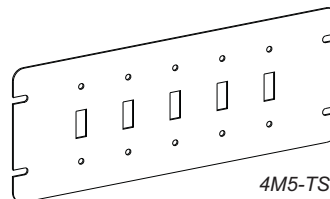


4M5-TS




HBC-B




HBC-BK




HBC-DR




HBC-GFI




HBC-SR




HBC-PO




HBC-TS

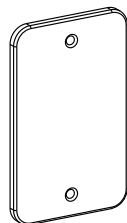


WHBC-B

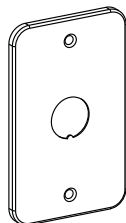


WHBC-BK

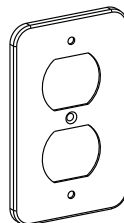


WHBC-DR

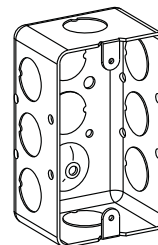


WDHB-1-50

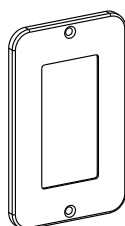

WHBC-GFI

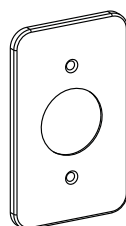

WHBC-SR

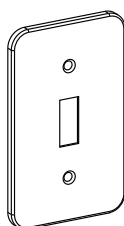

WHBC-TS